

Adjust HQ、HQC Series Pressure Switch

Adjust pressure switch


WI-D3-S-B046E-1

※Please install a pressure gauge on discharge pipe if you want to adjust pressure switch.



Loose the screws.

Remove the terminal box-set.

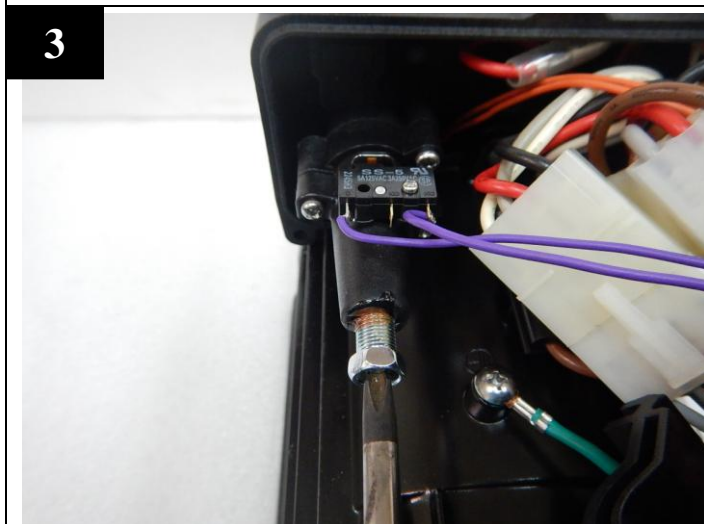

Plug in the power and turn the screw counterclockwise to the bottom position.

Close the faucet on discharge pipe.



At this time, you will see the max pressure of your system.


Wait for pump to stop and then open the faucet partially for a minimum flow coming out.



Let the system pressure drop to the preset activation point.


※Refer to the instruction manual for the Preset activation point of each model

Close the faucet.

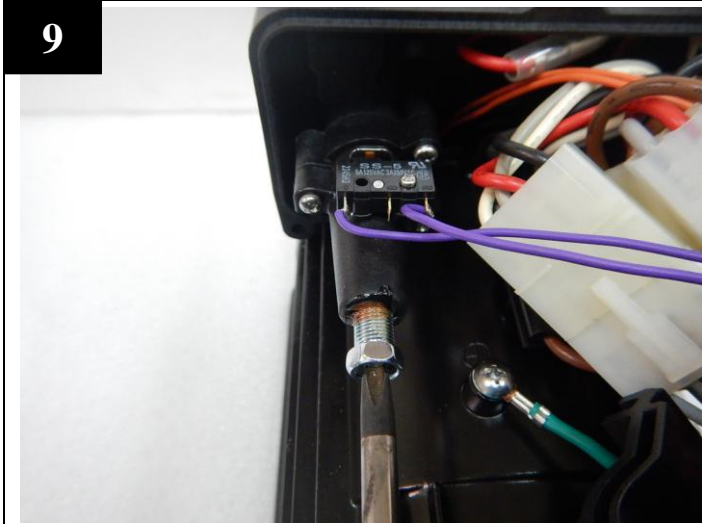

Turn the screw clockwise slowly until pump start.

Repeat process 4-7 to make sure starting pressure.

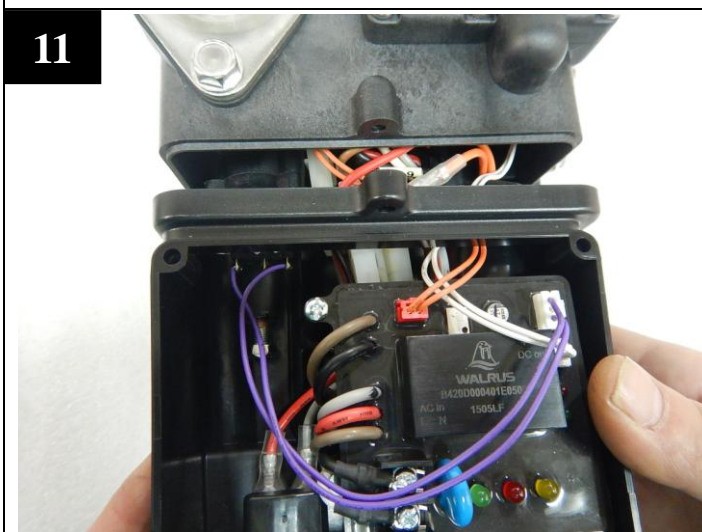

Install the terminal box-set.

Tighten up the screws.

※Torque 15-20 kgf · cm